


Embedded Installation:

1. Set support unit in place.
2. Mark hole location.
3. Move the support unit to allow holes excavation.
4. Core holes.
5. Set the support unit in place, level, secure, and pour concrete.
6. Clean the excess concrete off of the support tube.

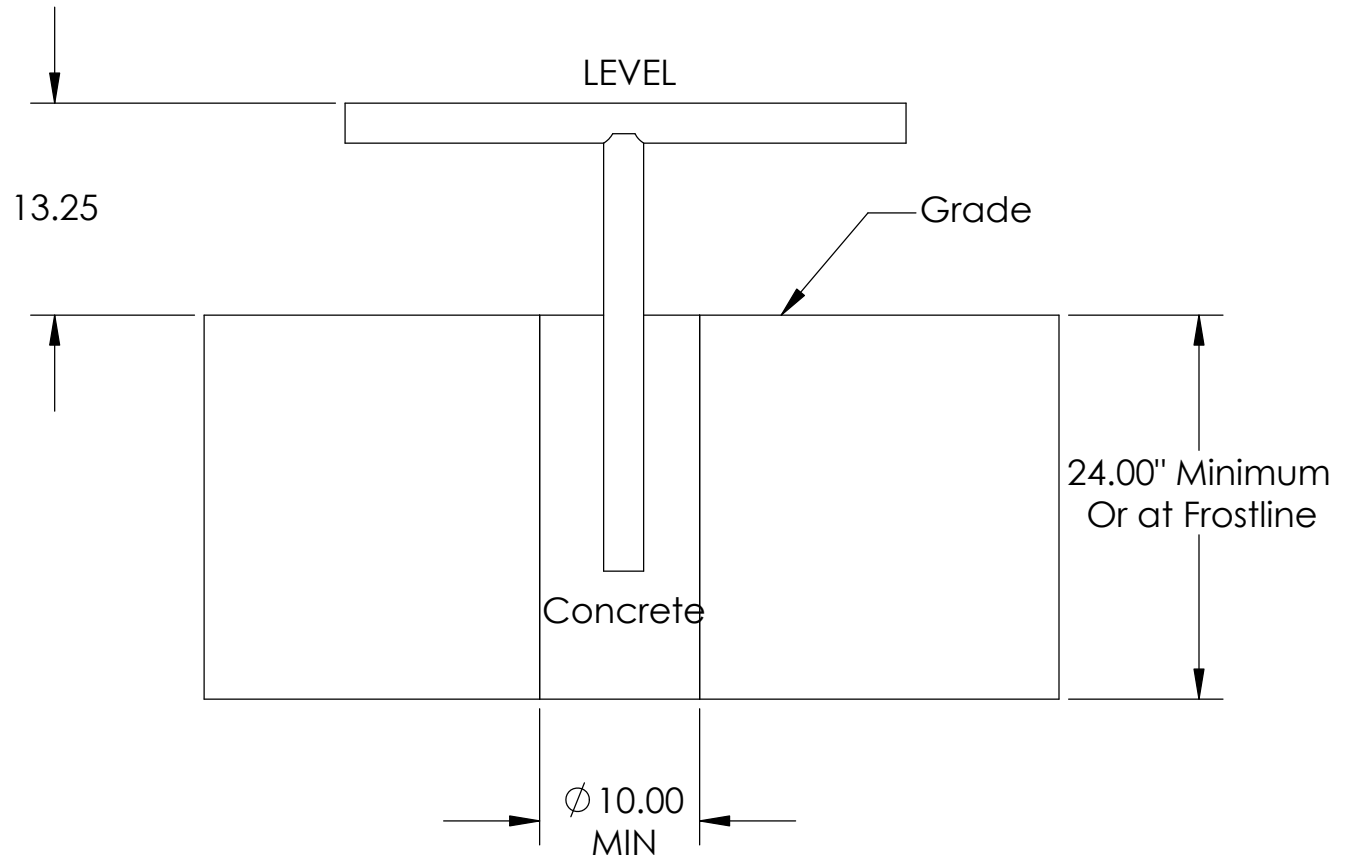

Conceptual Site Furnishings, Inc.

900 47th Street SW, Suite B
 Wyoming, MI 49509
 P.616.940.9830 F.616.940.9438
 www.conceptualsite.com

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Conceptual Site Furnishings, Inc. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF Conceptual Site Furnishings, Inc. IS PROHIBITED.

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES
 TOLERANCES:
 FRACTIONAL ±
 ANGULAR: MACH ± BEND ±
 TWO PLACE DECIMAL ±
 THREE PLACE DECIMAL ±

DO NOT SCALE DRAWING

NAME

DATE

COMMENTS:

DRAWN

APPROVED

MATERIAL:

FINISH:

SIZE
A

DWG. NO.

Embedded Installation

REV

SCALE: 1:16

WEIGHT:

SHEET 1 OF 1